

Alcoa  
Fastening  
Systems



## INSTRUCTION MANUAL

# 245

## PNEUDRAULIC INSTALLATION TOOL



Makers of Huck®, Marson®, Recoil®  
Brand Fasteners, Tools & Accessories

04-16-2012  
HK824





# EC Declaration of Conformity

**Manufacturer:**

Alcoa Fastening Systems, Industrial Products Group, 1 Corporate Drive, Kingston, NY, 12401, USA

**Description of Machinery:**

Model 245 series pneudraulic installation tools and specials based on their design (e.g. PR#####).

**Relevant provisions complied with:**

Council Directive related to Machinery (2006/42/EC)  
British Standard related to hand held, non-electric power tools (EN 792-1)

**European Representative:**

Rob Pattenden, Huck International, Ltd. Unit C Stafford Park 7, Telford Shropshire TF3 3BQ, England, United Kingdom

**Authorized Signature/date:**

I, the undersigned, do hereby declare that the equipment specified above conforms to the above Directive(s) and Standard(s).

Signature:

Full Name:

Larry M. Krieg

Position:

Engineering Manager  
Installation Systems Division

Place:

Kingston, New York, USA

Date:

April 2012

**Declared dual number noise emission values in accordance with ISO 4871**

A weighted sound power level, LWA: **91** dB (reference 1 pW)  
Uncertainty, KWA: 3 dB

A weighted emission sound pressure level at the work station, LpA: **80** dB  
(reference 20  $\mu$ Pa)  
Uncertainty, KpA: 3 dB

C-weighted peak emission sound pressure level, LpC, peak: **115** dB  
(reference 20  $\mu$ Pa)  
Uncertainty, KpC: 3 dB

Values determined according to noise test code ISO 15744, using as basic standards ISO 3744 and ISO 11203. The sum of a measured noise emission value and its associated uncertainty represents an upper boundary of the range of values which is likely to occur in measurements.

**Declared vibration emission values in accordance with EN 12096**

Measured Vibrations emission value, a: **.63** m/s<sup>2</sup>

Uncertainty, K: **.72** m/s<sup>2</sup>

Values measured and determined according to ISO 28662-1, ISO 5349-2, and EN 1033

Test data to support the above information is on file at Alcoa Fastening Systems, Industrial Products Group, Kingston Operations, Kingston, NY, USA.



## **CONTENTS**

<b>EU DECLARATION OF CONFORMITY</b> .....	<b>2</b>
<b>SAFETY</b> .....	<b>4</b>
<b>SPECIFICATIONS</b> .....	<b>5</b>
<b>PRINCIPLE OF OPERATION</b> .....	<b>6</b>
<b>PREPARATION FOR USE</b> .....	<b>7</b>
<b>SERVICING THE TOOL</b>	
General .....	7
Daily .....	7
Weekly .....	7
Disassembly .....	8-9
Assembly .....	10-11
Fill and Bleed .....	12-13
Assembly Drawing .....	14
Parts List .....	15
<b>TROUBLESHOOTING</b> .....	<b>16</b>
<b>KITS AND ACCESSORIES</b> .....	<b>16</b>



## SAFETY INSTRUCTIONS

### GLOSSARY OF TERMS AND SYMBOLS:



- Product complies with requirements set forth by the relevant European directives.



- **READ MANUAL** prior to using this equipment.



- **EYE PROTECTION IS REQUIRED** while using this equipment.



- **HEARING PROTECTION IS REQUIRED** while using this equipment.



**WARNINGS: Must be understood to avoid severe personal injury.**



**CAUTIONS: show conditions that will damage equipment and or structure.**

**Notes:** are reminders of required procedures.

***Bold, Italic type and underlining:*** emphasizes a specific instruction.

1. A half hour long hands-on training session with qualified personnel is recommended before using Huck equipment.
2. Huck equipment must be maintained in a safe working condition at all times. Tools and hoses should be inspected at the beginning of each shift/day for damage or wear. Any repair should be done by a qualified repairman trained on Huck procedures.
3. Repairman and Operator must read manual prior to using equipment. Warning and Caution stickers/labels supplied with equipment must be understood before connecting equipment to any primary power supply. As applicable, each of the sections in this manual have specific safety and other information.
4. Read MSDS Specifications before servicing the tool. MSDS Specifications are available from the product manufacturer or your Huck representative.
5. When repairing or operating Huck installation equipment, always wear approved eye protection. Where applicable, refer to ANSI Z87.1 - 2003
6. Only genuine Huck parts shall be used for replacements or spares. Use of any other parts can result in tooling damage or personal injury.
7. If a part affixed with warning labels is replaced, or labels are missing or damaged, the end user is responsible for replacement. Refer to assembly drawing and parts list for replacement part number and proper placement.
8. Disconnect primary power source before performing maintenance on Huck equipment or changing Nose Assembly.
9. Tools and hoses should be inspected for leaks at the beginning of each shift/day. If any equipment shows signs of damage, wear, or leakage, do not connect it to the primary power supply.
10. Mounting hardware should be checked at the beginning of each shift/day.
11. Make sure proper power source is used at all times.
12. Release tool trigger if power supply is interrupted.
13. Tools are not to be used in an explosive environment unless specifically designed to do so.
14. Never remove any safety guards or pintail deflectors.
15. Where applicable, ensure deflector or pintail collector is installed and operating prior to use.
16. Never install a fastener in free air. Personal injury from fastener ejecting may occur.
17. Where applicable, always clear spent pintail out of nose assembly before installing the next fastener.
18. There is possibility of forcible ejection of pintails or spent mandrels from front of tool.
19. Check clearance between trigger and work piece to ensure there is no pinch point when tool is activated. Remote triggers are available for hydraulic tooling if pinch point is unavoidable.
20. Unsuitable postures may not allow counteracting of normal expected movement of tool.
21. Do not abuse tool by dropping or using it as a hammer. Never use hydraulic or air lines as a handle or to bend or pry the tool. Reasonable care of installation tools by operators is an important factor in maintaining tool efficiency, eliminating downtime, and in preventing an accident which may cause severe personal injury.
22. Never place hands between nose assembly and work piece. Keep hands clear from front of tool.
23. There is a risk of crushing if tool is cycled without Nose Assembly installed.
24. Tools with ejector rods should never be cycled with out nose assembly installed.
25. When two piece lock bolts are being used always make sure the collar orientation is correct. See fastener data sheet for correct positioning.
26. Tool is only to be used as stated in this manual. Any other use is prohibited.
27. There is a risk of whipping compressed air hose if tool is pneudraulic or pneumatic.
28. Release the trigger in case of failure of air supply or hydraulic supply.
29. Use only fluids or lubricants recommended.
30. Disposal instruction: Disassemble and recycle steel, aluminum and plastic parts, and drain and dispose of hydraulic fluid in accordance with local lawful and safe practices.
31. If tool is fixed to a suspension device, ensure that the device is secure prior to operating the tool.



## TOOL SPECIFICATIONS

**MAX OPERATING TEMP:**

125°F (51.7°C)

**MAX FLOW RATE:**

11.5 scfm (325.64 l/m)

**MAX AIR PRESSURE:**

100 psi (6.9 bar)

**MIN PULL CAPACITY:**

7750 lbs (34.5 kN) @ 90 psi

**MIN STROKE:**

.625 inches (1.59 cm)

**SPEED/CYCLES:**

30 per minute

**WEIGHT:**


8.8 lbs (3.99 kg)

**POWER SOURCE:**

90-100psi shop air


**HYDRAULIC FLUID:**

ATF meeting DEXRON III, DEXRON IV, MERCON, Allison C-4 or equivalent specifications. Fire resistant hydraulic fluid may also be used, and is required to comply with OSHA regulation 1926.302 paragraph (d): "the fluid used in hydraulic power tools shall be fire resistant fluid approved under schedule 30 of the US Bureau of Mines, Department of Interior, and shall retain its operating characteristics at the most extreme temperatures to which it will be exposed."

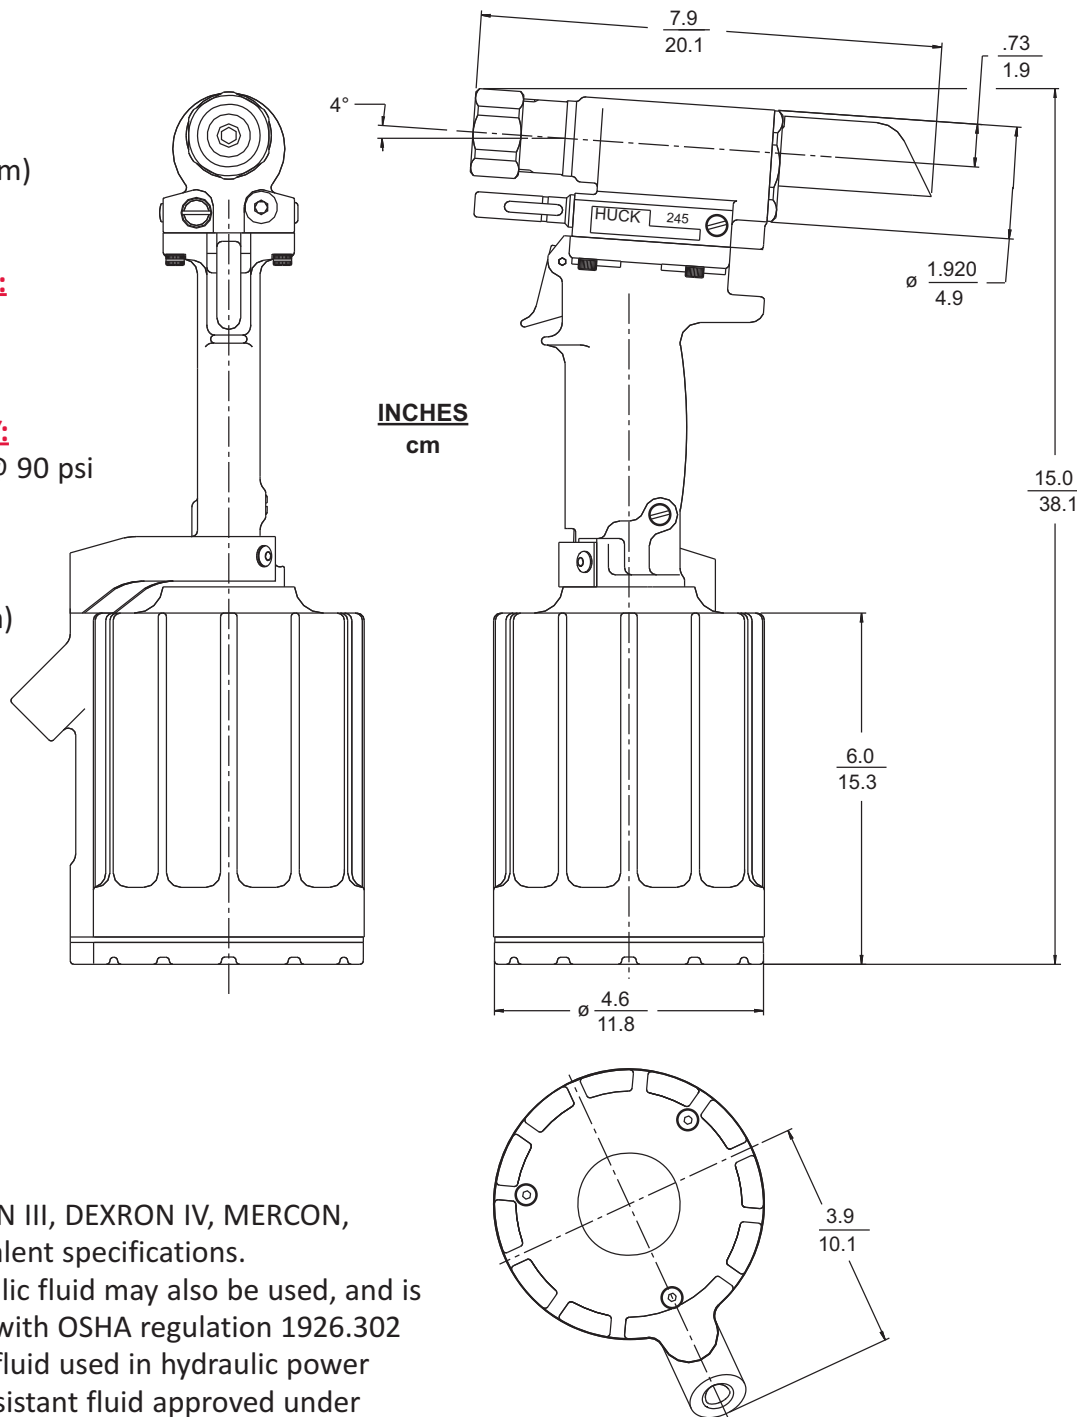



## PRINCIPLE OF OPERATION

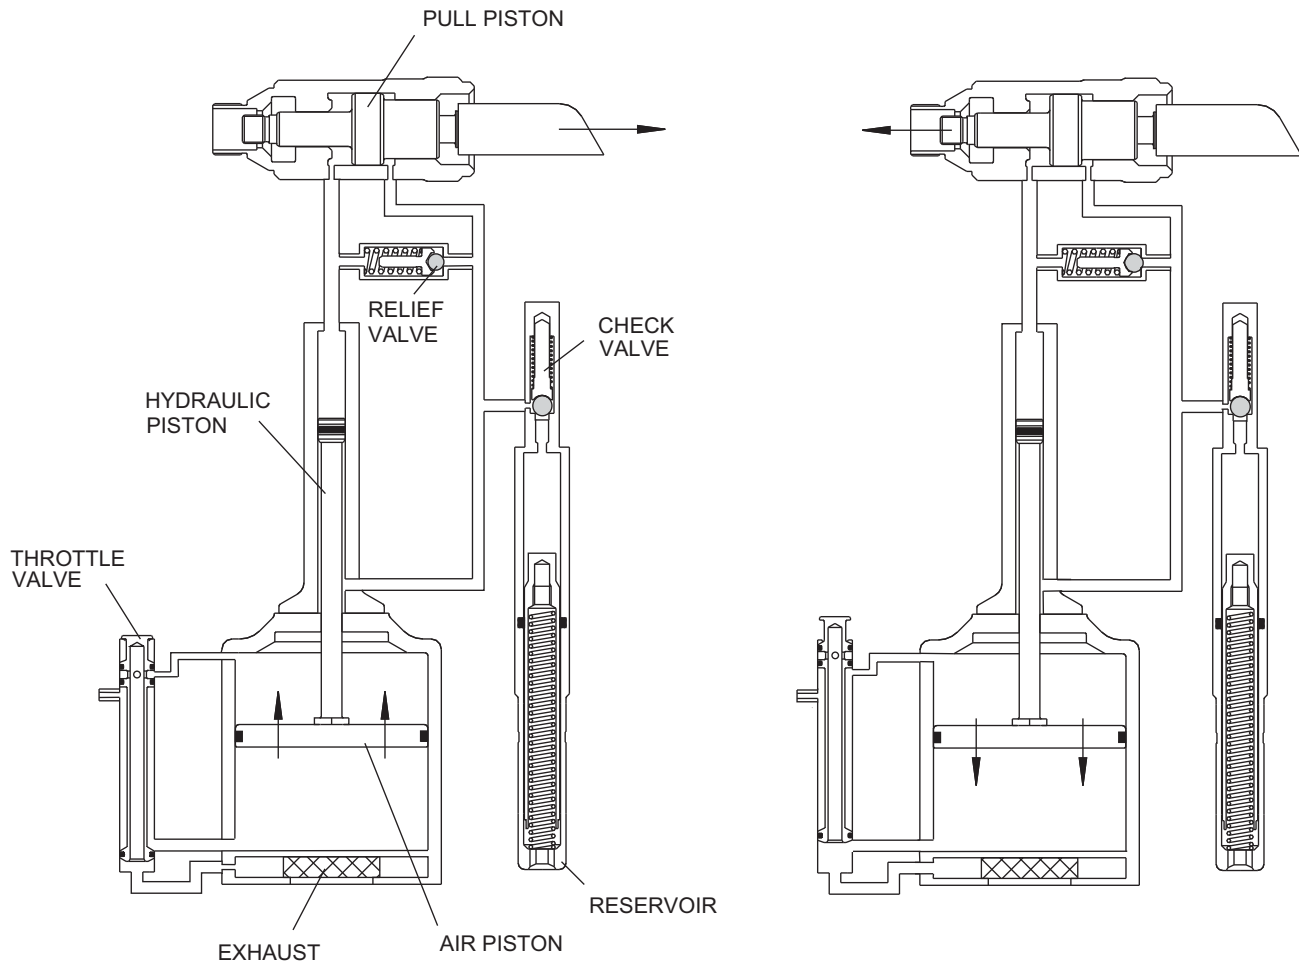

### PULL

When the trigger is depressed, the throttle valve moves to the down position, and pressurized air is directed to the bottom of the air piston, causing it to move upward. The air above the piston is exhausted and directed through the center of the throttle valve rod and out the bottom of the tool. The air piston has a rod and a hydraulic piston attached. When the air piston rod moves upward, a column of pressurized fluid is forced into the tool head, which moves the pull piston back. The attached nose assembly moves with the pull piston to start fastener installation.

### RETURN

When fastener installation is completed, the trigger is released. Air pressure, with the assistance of a spring, causes the throttle valve to return to its up position. Pressurized air is re-directed to the top of the air piston, causing it to move downward. The air from below the piston is exhausted through the bottom of the tool. The rod and hydraulic piston move downward, hydraulic pressure is reversed, and the pull piston is returned forward. The return pressure relief valve protects the tool against pressure spikes. The reservoir replenishes the hydraulic system as needed.



## PREPARATION FOR USE

The Model 245 Installation Tool is shipped with a plastic plug in the air inlet connector. The connector has 1/4-18 female pipe threads to accept the air hose fitting. Quick disconnect fittings and 1/4" inside diameter air hose are - recommended. An air supply of 90-100 psi capable of 11.5 CFM must be available. Air supply should be equipped with a filter-regulator-lubricator unit.

1. Remove plastic shipping plug from Air Inlet Connector and put in a few drops of Automatic Transmission Fluid, DEXRON III, or equivalent.
2. Screw quick disconnect fitting into Air Inlet Connector.



**CAUTION: Do not use TEFLON tape on threads. Use TEFLON in stick form only. (Huck P/N 503273)**

3. Set air pressure on regulator to 90-100 psi.
4. Attach optional Air Hose (38), supplied with tool, to air inlet connector.
5. Connect air hose to tool.
6. Cycle tool a few times by depressing and releasing trigger.

7. Disconnect air hose from tool.
8. Remove Retaining Nut and Stop.
9. Select proper Nose Assembly for fastener to be installed.
10. Screw Collet Assembly (including lock collar and shim if applicable) onto Spindle.  
(Wrench Tight)
11. Slide Anvil over Collet Assembly and into counterbore.
12. Slide Stop and Retaining Nut over Anvil and screw Nut onto Head.
13. Connect air hose to tool and install fastener(s) in test plate of proper thickness with proper size holes. Inspect fastener(s).

### NOTES:

- 1 Air quick disconnect fittings and air hoses are not available from Huck International, Inc.
- 2 **VIBRA-TITE** should be used on collect threads for nose assemblies without lock collars. All other noses should be staked (*please refer to nose assembly data sheets*).

## SERVICING THE TOOL

### GENERAL

1. The efficiency and life of any tool depends upon proper maintenance. Regular inspection and correction of minor problems will keep tool operating efficiently and prevent downtime. The tool should be serviced by personnel who are thoroughly familiar with how it operates.
2. A clean, well-lighted area should be available for servicing the tool. Special care must be taken to prevent contamination of pneumatic and hydraulic systems.
3. Proper hand tools, both standard and special, must be available.
4. All parts must be handled carefully and examined for damage or wear. Always replace Seals, when tool is disassembled for any reason. Components should be disassembled and assembled in a straight line without bending, cocking, or undue force. Disassembly and assembly procedures outlined in this manual should be followed.
5. **Service Parts Kit 245KIT** includes consumable parts and should be available at all times. Other components, as experience dictates, should also be available.



**WARNING: Inspect tool for damage or wear before each use. Do not operate if damaged or worn, as severe personal injury may occur.**

### DAILY

1. If a Filter-Regulator-Lubricator unit is not being used, uncouple air disconnects and put a few drops of Automatic Transmission Fluid or light oil into the air inlet of the tool. If the tool is in continuous use, put a few drops of oil in every two to three hours.
2. Bleed the air line to clear it of accumulated dirt or water before connecting air hose to the tool.
3. Check all hoses and couplings for damage or air leaks, tighten or replace if necessary.
4. Check the tool for damage or air/hydraulic leaks, tighten or replace if necessary.
5. Check the nose assembly for tightness or damage, tighten or replace if necessary.
6. Check oil level in tool reservoir, replenish if necessary.

### WEEKLY

1. Disassemble and clean nose assemblies and reassemble per applicable NOSE ASSEMBLY DATA SHEET.
2. Check the tool and all connecting parts for damage or oil/air leaks, tighten or replace if necessary.



## DISASSEMBLY INSTRUCTIONS




**WARNING:** Be sure air hose is disconnected from tool before cleaning, or performing maintenance. Severe personal injury may occur if air hose is not disconnected.

(Refer to Figures 1-3 and 9)

**NOTE:** The following procedure is for complete disassembly of tool. Disassemble **only** components necessary to replace damaged O-rings, Quad rings, Back-up rings, and worn or damaged components. Always use soft jaw vice to avoid damage to tool.

1. Disconnect air hose from tool.
2. Remove air hose (38) from cylinder.
3. Remove nose assembly. Follow instructions on Nose Assembly Data sheet.
4. Remove Screws (63) and Guard (68) (Fig. 9).
5. Insert Fill Tool, P/N 112465 through reservoir housing and screw into reservoir plunger (79) locking it in the out position (Fig.1).
6. Unscrew cap screws (69) with 5/32 hex key. Carefully lift Head straight up from Handle (1), remove Pull Gland (95) and Return Gland (22) from separated assemblies.(Remove seals from glands) (Fig.1).
7. Unscrew Plug (83) of return Pressure Relief Valve from front of head. Remove Spring (84), Valve Guide (86), sleeve (85) and Steel Ball (87). A small magnet is helpful (Fig.1)
8. Unscrew Bleed Plug (64). Hold over waste oil container and release fill tool slowly.
9. Unscrew Reservoir Housing (81) from head. Remove two Springs (82). Slide Reservoir Plunger (79) from head. Remove spacer and quad ring (80). A pick may be used to remove the quad ring (Fig.1).
10. Unscrew Plug (71) of reservoir check Valve from side of head. Remove Spring (75), check Valve Plunger (76) and Stainless Steel Ball (77) (Fig.1).
11. If check valve seat (78) is damaged contact your Huck representative. If seat (88) is damaged it can be removed by using the following procedure. **NOTE:** If seat is taken out it can not be reused, it must be replaced (Fig.9).
12. **(Seat (88) removal)** *Note: all parts in the reservoir check valve must be removed before plug 70 can be removed.* Unscrew plug 74, insert a #10 screw in the thread of plug (70), pull to remove. Using a small drift and hammer, from the rear side of the head drive seat (88) out towards the front of the head (Fig.9).
13. Pintail Deflector (19) can be pulled off deflector tube at rear of Piston.
14. Unscrew End Cap (20) from Head (89) with 1 9/16 open end wrench (Fig.9).
15. Thread assembly/disassembly bullet (120792) onto piston. Tap or press piston assembly out of head. Remove wiper (9) and polyseal (10). **NOTE:** Piston will push out rear gland assembly. (Fig. 2)
16. Remove Bushing and Screw Assy (67) from Throttle Arm (66). Remove throttle arm. Pull Throttle Valve (36) out of cylinder. Remove Spring (40). (Fig. 9).

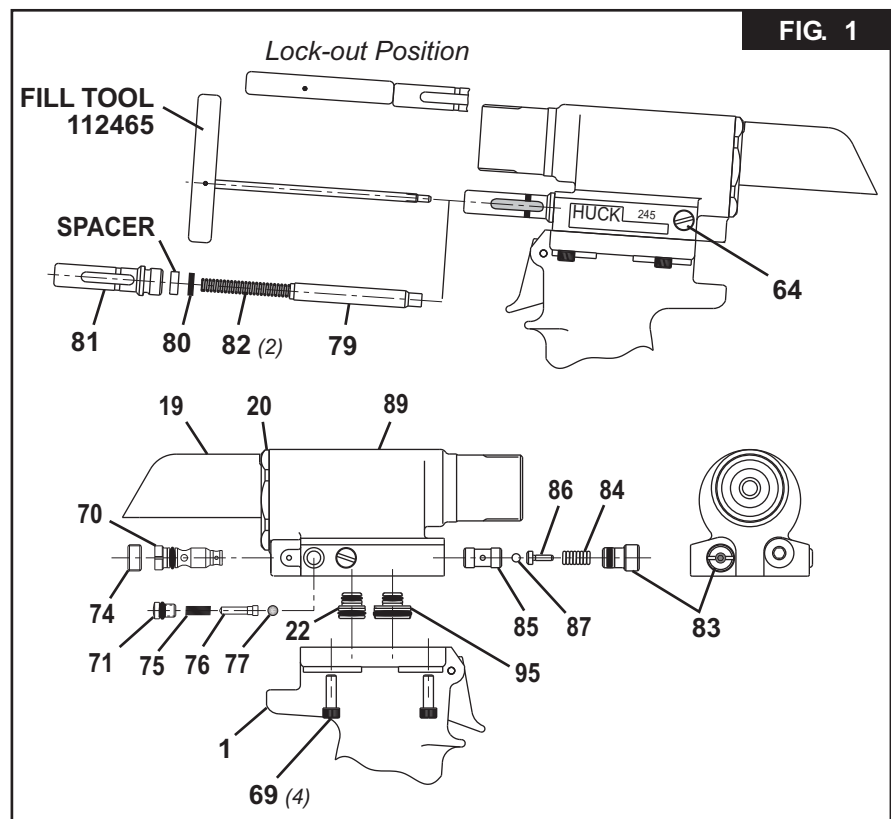







## **DISASSEMBLY** (continued)

17. With a small punch and hammer, drive Roll Pin (5) from handle (1). Remove trigger and cable from handle and disassemble by removing pin (4) (Fig. 9).
18. Remove Bleed Screw (64) from handle (Fig. 3).
19. Hold tool inverted in vice. Unscrew three Button Head Screws (45) with 1/8 hex key. (Fig. 3).
20. Remove bottom Plate (42), Bottom Exhaust Gasket (46), Muffler (43) and O-ring (44) (Fig 3).
21. Remove Retaining Ring (47) from Cylinder (53) (Fig 3).
22. Screw button head screws (45) into Cylinder Head (49). Carefully pry under screws to remove cylinder head.
23. Push air piston all the way down in cylinder, lay tool on its side. Hold nut (41) with a 9/16 socket and extension and with 7/64 hex key, remove piston screw (32) (Figs 4 & 9).
24. Turn cylinder and handle upside down and secure in a vise.
25. Grip lock nut (41) under Air Piston with pliers and pull piston and rod assembly from handle and cylinder assembly (Fig 3).

**CAUTION:** Care must be given not to scratch piston rod or cylinder during removal.

26. With a 1 3/8 socket and extension, remove Gland Assembly (54). Handle and cylinder will now separate.
27. Push Hydraulic Piston (31) out of handle. Push out from top to bottom.

**CAUTION:** A plastic or wooden drift must be used to avoid damaging the handle bore.

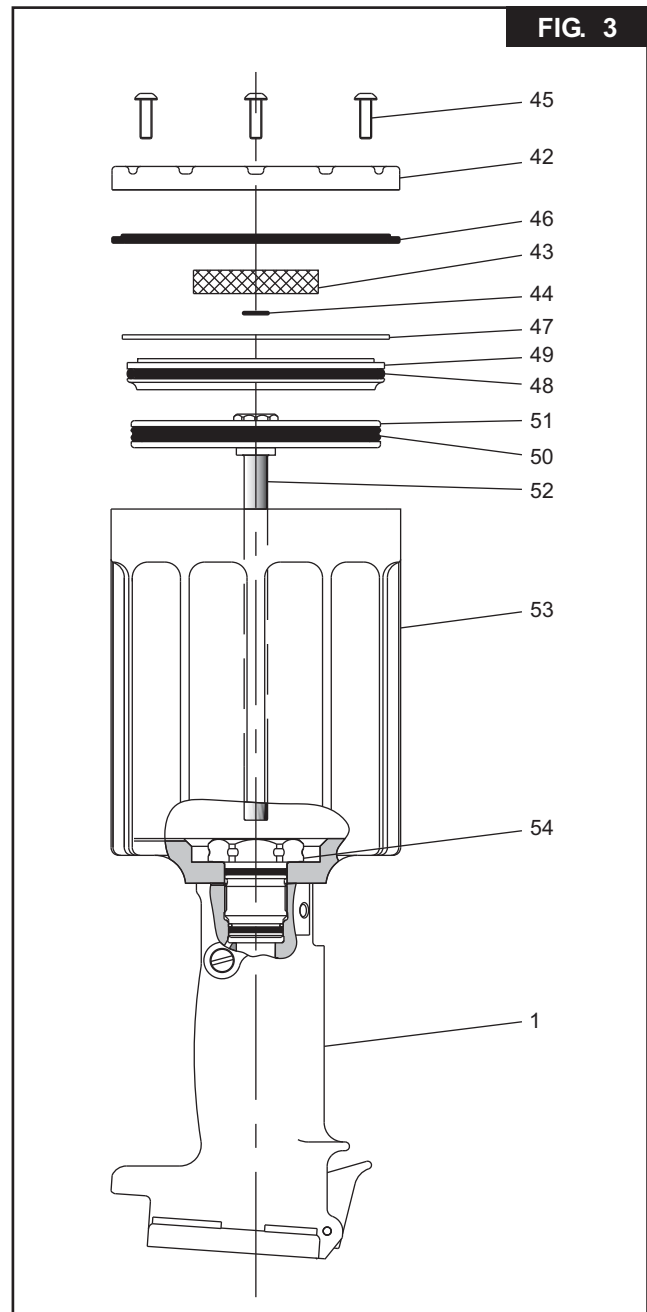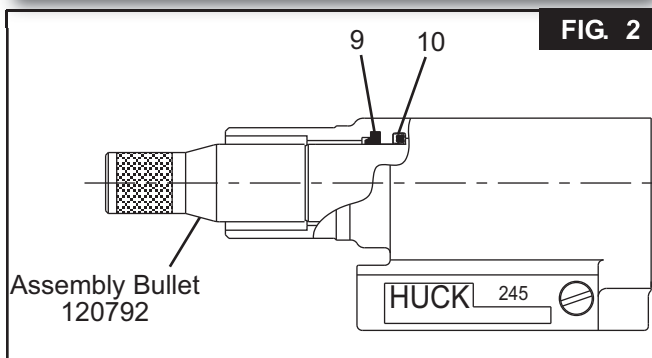


28. To remove polyseal (61) from Gland Assembly (54). Remove retaining ring (59) and spacer (60). (Fig. 9)



## ASSEMBLY INSTRUCTIONS

Clean components with mineral spirits or similar solvent; inspect for wear/damage and replace all seals of disassembled components as necessary. Use O-rings, QUAD rings and Back-up rings in Service Parts Kit **245KIT**. Smear LUBRIPLATE 130AA or PARKER-O-LUBE on O-rings, QUAD rings, Back-up rings and mating parts to ease assembly. Assemble tool taking care not to damage rings.

1. Holding handle inverted in a vice, Place Cylinder (53) on handle with Timing Pin positioned in matching hole. Assemble Gland Assembly (54) (Figure 9), and screw it into handle. Torque to 100-120 ft. lbs. using 1 3/8 socket wrench.
2. Push Air Piston/Rod assembly with Quad ring (50) in place into Air Cylinder until it bottoms at top of Cylinder (Fig 4).

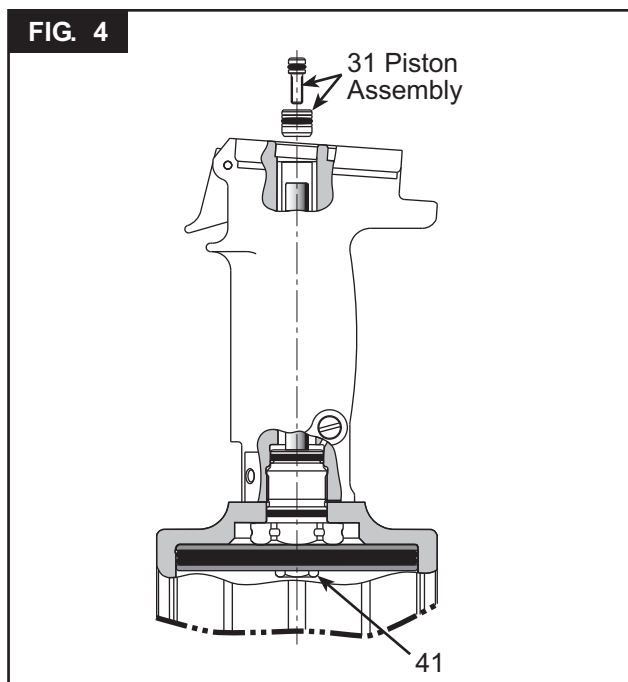


3. Turn tool upright. Install Hydraulic Piston (31) (with O-ring (33) and Back-up rings (27) in place) in handle. Press in from top of handle taking care not to damage seals. (Fig.4).
4. Push Screw (32) with o-ring (35) in place through Hydraulic Piston (34) and screw into top of piston rod. Hold Nut (41) with 9/16 socket and extension and torque Screw (32) using 7/64 hex key to 55 - 60 in. lbs.
5. Hold handle in vise with bottom facing up. Push Cylinder Head (49) with O-ring (48) in place squarely into cylinder. Install Retaining Ring (47). (Fig. 3 & 9)

6. Position O-ring (44) and Muffler (43) on center of Cylinder Head (49), place Gasket (46) on cylinder assembly (53) **NOTE: Lip must face Bottom Plate (42)**. Place Bottom Plate (42) on top of Gasket and secure with 3 Button Head Screws (45) using 1/8 hex key. (Fig. 3)
7. Turn tool upright. Drop spring (40) into Throttle valve hole in cylinder. Push Throttle Valve (36) with O-rings (37 & 39) in place into cylinder. (Fig. 9)
8. Assemble Trigger (3) cable (2) and pin (4) and slide cable into handle (1). Align hole in Trigger with hole in handle and install Roll Pin (5) with a hammer and punch. (Fig. 9)
9. Slide Throttle Arm (66) onto ball end of Throttle Cable. Swing arm until other end fits over throttle valve. Push Bushing & Screw Assembly (67) through Throttle Arm (66); tighten with 5/32 hex key.
10. If air hose (38) was removed reinstall in cylinder (53).
11. **(If seat (88) is being replaced)** Push plug (70) (with O-ring 72 & Back-up ring 25 in place) into head. Install screw (74) (Fig.9).
12. Install O-ring (72) and Back-up rings (25) onto seat. Drive seat and seal assembly in using soft drift taking care not to damage ball seat surface. (Fig. 1 & 9)
13. Assemble Pull Piston (11) with new seals (12 & 13). Lubricate with LUBRIPLATE or PARKER SUPER-O-LUBE. (Fig. 9)
14. Install Wiper (9) & Polyseal (10) in head. (Fig 2)
15. Thread assembly bullet onto Pull Piston (11) and push entire assembly into head. (Figure 2)
16. Install O-rings (14 & 16) & Back-up rings (15 & 17) on rear gland (18). Push complete assembly into head, screw in end cap (20) and tighten. (Figure 9)
17. Install O-ring (72) & Back-up ring (25) on plug (83). Install Ball (87), Guide (86), Sleeve (85), Spring (84) and Plug (83) into head. (Figures 1 & 9).
18. Install O-ring (65) on Plug (71). Install Ball (77), Guide (76), Spring (75) and Plug (71) into head.



## **ASSEMBLY** *(continued)*

19. Push Deflector (19) onto Deflector Tube (21). (Fig. 9)
20. Place O-ring (65) on Plug (64) and screw assembly into Handle (1). (Fig. 9)
21. Install O-rings (24 & 30) & Back-up Rings (25 & 29) on Pull Gland (28), and O-rings (24 & 26) & Back-up Rings (25 & 27) on Return Gland (23). Push Gland Assemblies into handle. Push head down on glands. Place tool in a vise Head down and install 4 Screws (69) and torque to 170 inch pounds. (Fig. 5)
22. Tool is now completely assembled and ready for Fill and Bleed.

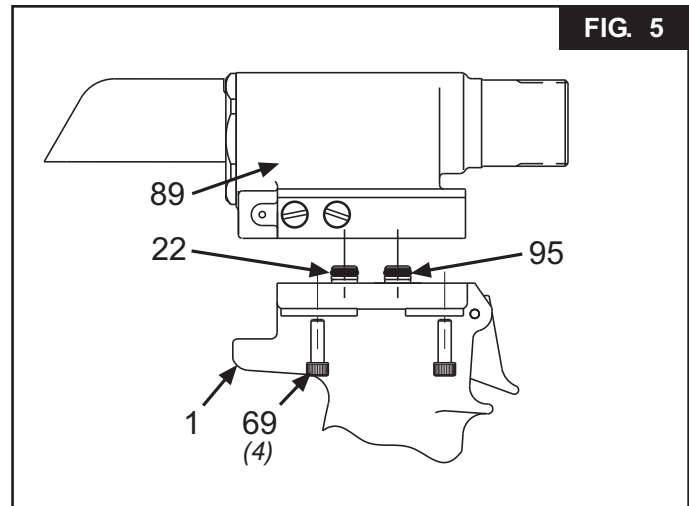

## NOTES



## FILL AND BLEED

### Equipment Required:

- Shop airline with 90 - 100 psi max.
- Air regulator
- Fill Bottle, 120337, (supplied with tool).
- Fill Tool, 112465, (supplied with tool).
- Large flat blade screwdriver
- Optional Stall Nut 120824
- Nose assembly
- Fasteners (Optional)

### Preparation:

1. Install air regulator in airline and set pressure to 20-40 psi.
2. Fill bleed bottle almost full of DEXRON III ATF or equivalent. (Fig.6) Refill tool only when red line on plunger drops below the red line on the reservoir housing or when tool is rebuilt. **USE: AUTOMATIC TRANSMISSION FLUID DEXRON III, OR EQUIVALENT.**

**WARNING:** Avoid contact with hydraulic fluid. Hydraulic fluid must be disposed of in accordance with Federal, State and Local Regulations. Please see MSDS for Hydraulic fluid shipped with tool.

### Step 1

Screw Fill Tool P/N 112465 into Reservoir Plunger, pull Plunger into Housing and lock Fill Tool in full forward position by tilting handle (long side touching tool) and locking in place (Fig.7).

### Step 2




Remove Plugs (83) and (71) and all guides, springs and balls from ports in head. Reinstall Plug (83) in head in Relief Valve port (front of tool) (Fig 7 & 8).

### Step 3

Screw retaining nut onto Head Assembly. Screw Stall Nut (optional) onto Piston and tighten to ensure full thread engagement. Back off retaining nut until it engages stall nut. Check Piston location. Piston must be all the way forward and locked with stall nut and retaining nut. **Note: If Stall Nut is not used, piston must be pushed to full forward position before installing valves.**

### Step 4

Attach the tool air source momentarily to seat air piston at bottom of cylinder. Disconnect tool. With fill port facing up, (check valve on side) lay tool on its side. (See Fig. 7)

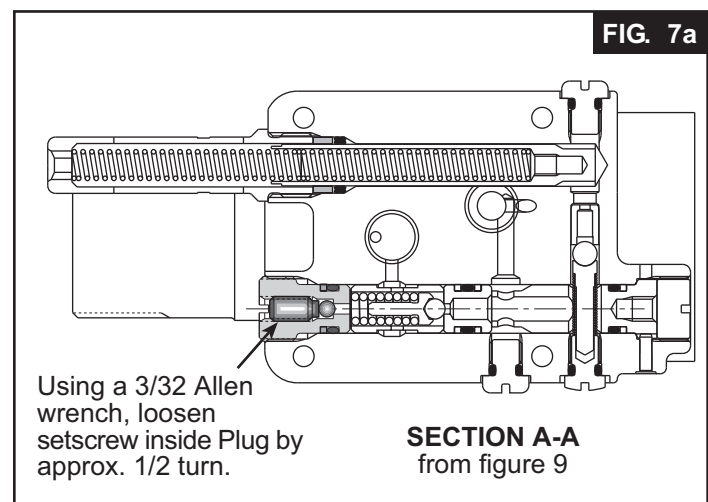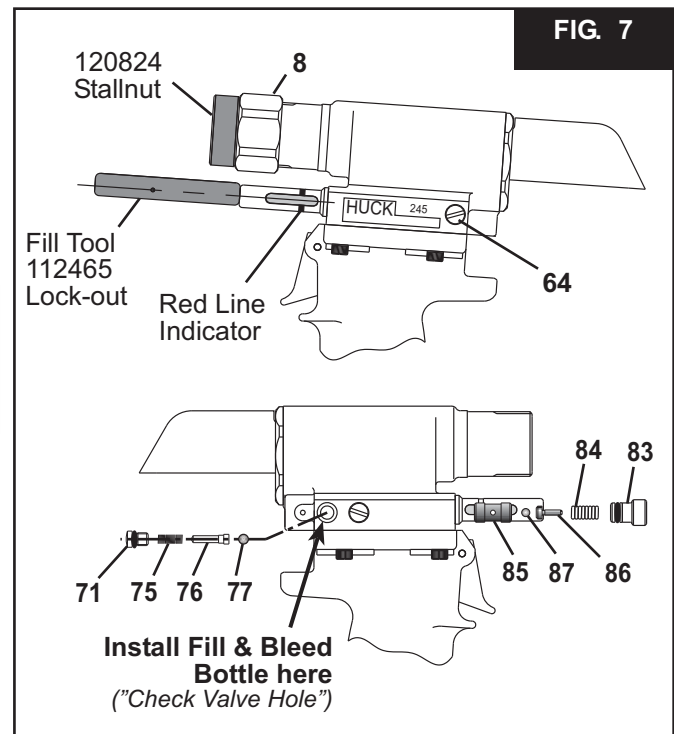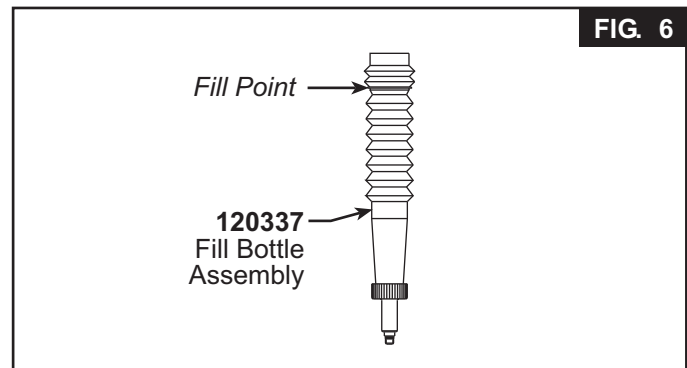




## FILL AND BLEED (continued)

### Step 5

Install fill bottle in head fill port (check Valve hole) (See Fig. 7 & 8).

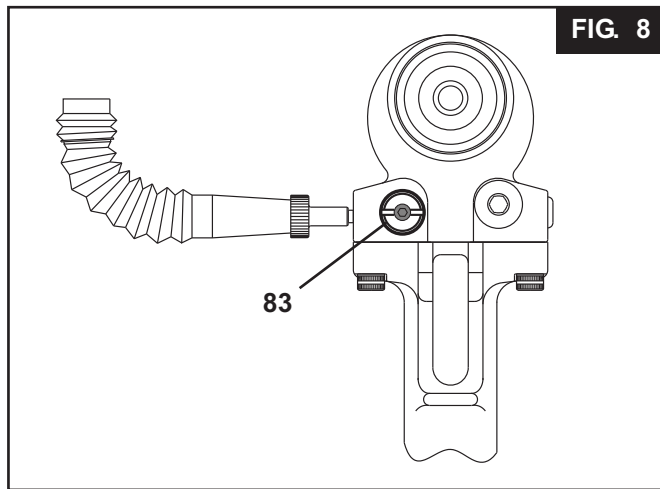

### Step 6

Connect tool to shop air regulated to 20 to 40 psi. Cycle tool 20-30 times, watch for air bubbles escaping from the tool into bottle. (you may rock the tool to free trapped air in the tool.) Do not allow the air to re-enter the tool.



**WARNING:** Air pressure **MUST** be set to 20 to 40 psi to prevent possible injury from high pressure spray. If plug (71) is removed, fill bottle must be in place before cycling tool.

### Step 7

When air bubbles no longer appear in bottle, remove fill bottle while tool is lying on its side.

### Step 8

Install the check valve ball (77), guide (76) and spring (75). Replace Plug (71). (Fig. 7) **Note: When cycling tool, always hold bottle upright as shown in Figure 8 to prevent drawing in air from empty part of bottle.**

### Step 9

Turn tool so front of head faces you and remove the relief valve plug (83). Prior to removing Plug (83), it is advisable to back out setscrew inside of plug by approximately 1/2 turn counterclockwise. (See Figure 7a). This ensures that the Piston will remain in full-forward position. Install relief valve ball (87), guide (86), sleeve (85) and spring (84). Replace the plug (83) and re-tighten setscrew (Figure 7a).

### Step 10

Unlock Fill Tool and check Reservoir red line. At this point cycle tool with Stall Nut (Optional see note:) attached and retaining nut locked in the full forward

position ('Dead Stall'). Reservoir should not drop below the red line on the reservoir housing.

**Note:** Dead Stalling is not necessary if Optional Stall nut was not used, just cycle tool.

### Step 11

Re-lock the fill tool in out position. Lay tool on its left side and remove plug (64). Top off reservoir - - place a few drops of oil in hole and wait for air bubbles to escape. Push a pin or a scribe into hole to check for trapped air bubbles. Replace plug (Fig. 7).



**WARNING:** Failure to re-lock the fill tool will result in oil being ejected from the head under pressure during the topping off of the reservoir. Severe personal injury may result.

### Step 12

Unlock the fill tool and cycle tool as in step 10. Reservoir may drop slightly, if so, repeat step 11 until when you touch the fill tool handle it has no pressure against it and it drops out of the lock position, and the plunger does not drop when tool is cycled. **NOTE:** This usually requires 3 to 4 times topping off.


### Step 13

Remove fill tool and stall nut (if used). Install a nose assembly and pull several fasteners to test function.



# ASSEMBLY DRAWING

FIG. 9

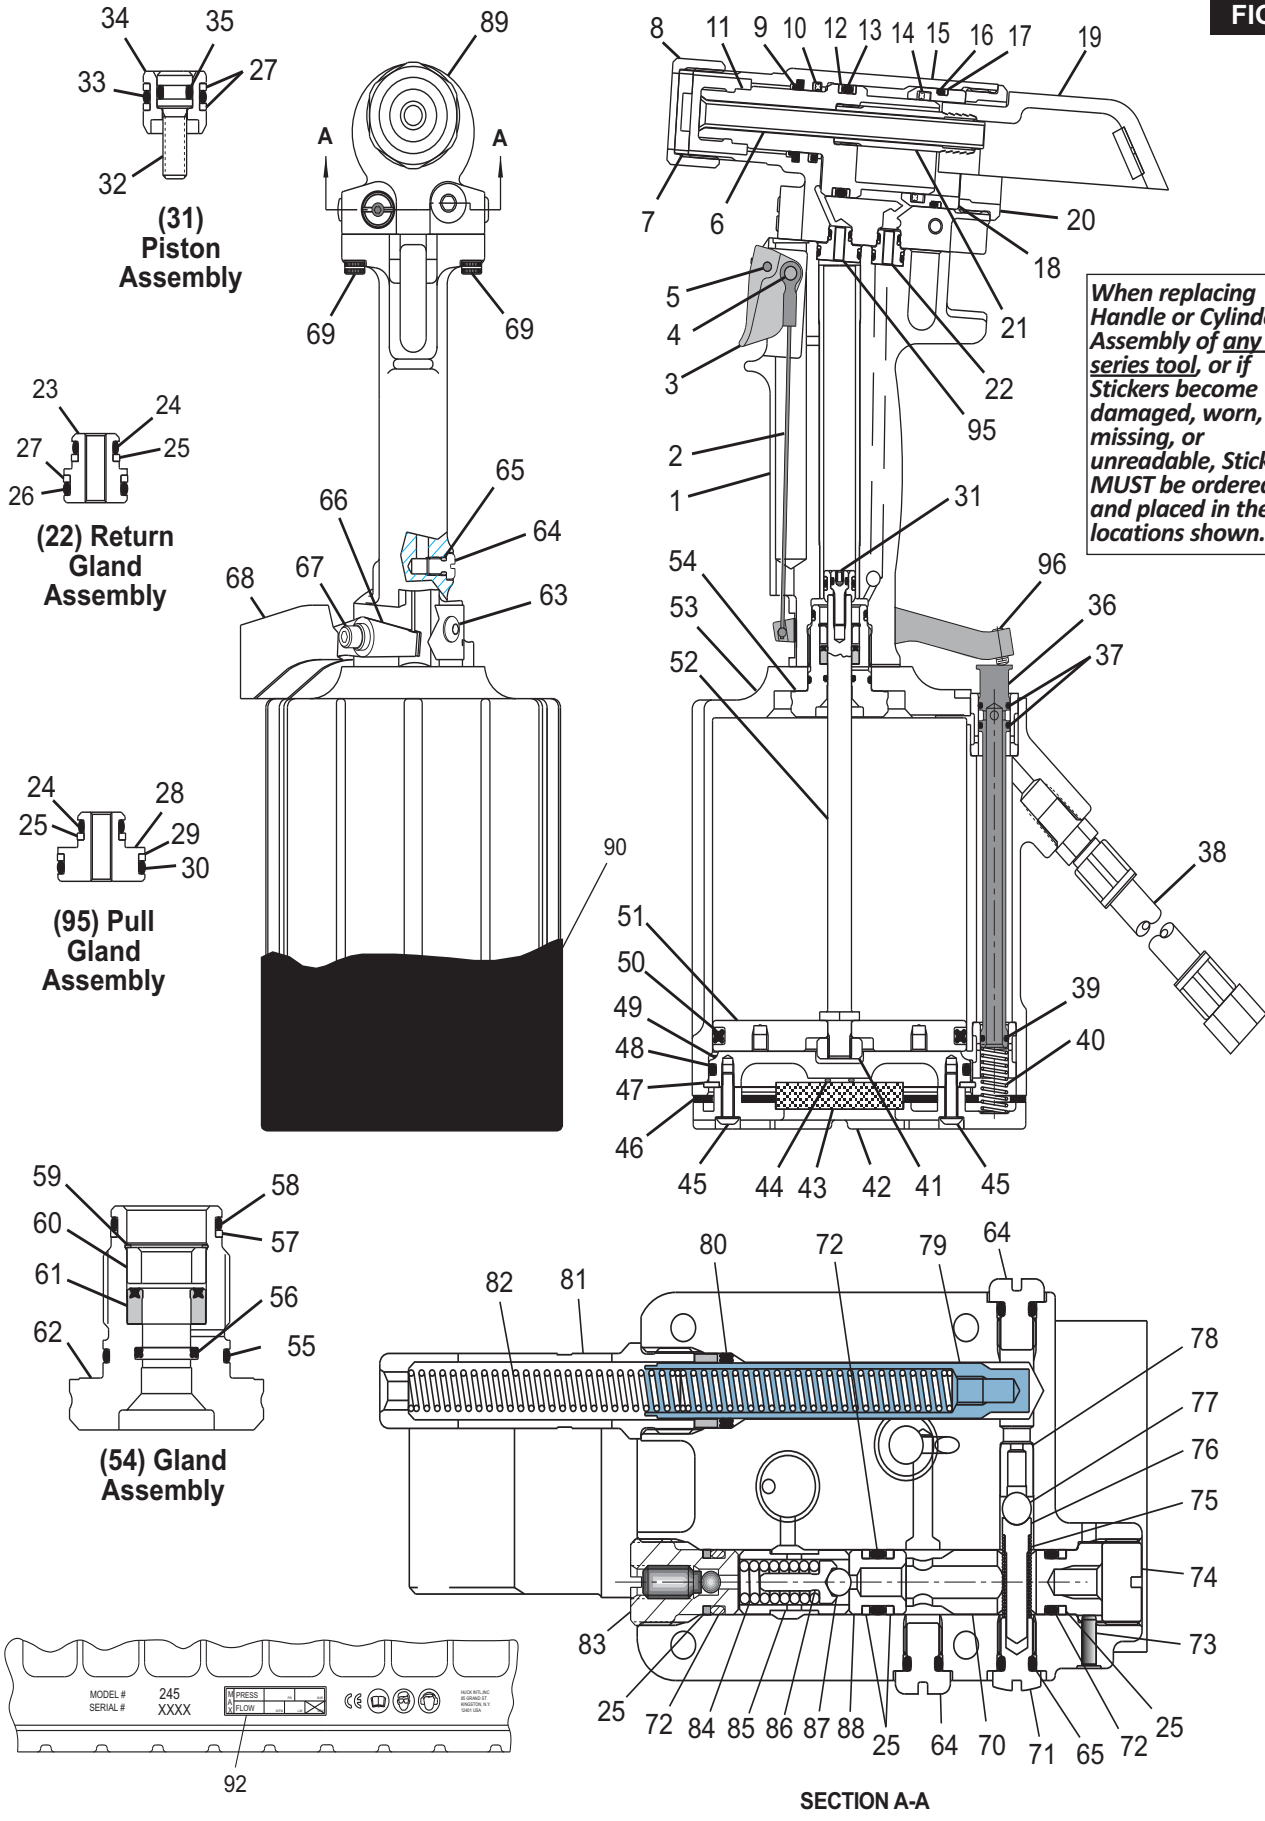

When replacing Handle or Cylinder Assembly of any 245 series tool, or if Stickers become damaged, worn, missing, or unreadable, Stickers MUST be ordered and placed in the locations shown.

(31) Piston Assembly

(22) Return Gland Assembly

(95) Pull Gland Assembly

(54) Gland Assembly

MODEL # 245  
SERIAL # XXXX  
PRESS FLOW

SECTION A-A



## PARTS LIST

ITEM	PART#	DESCRIPTION	QTY	ITEM	PART#	DESCRIPTION	QTY
1	125641	Handle & Sleeve Assembly	1	49	111959	Cylinder Head	1
2	125643	Cable Assembly	1	50	501460	Quad Ring	1
3	124333-2	Trigger	1	51	100315	Piston, Air	1
4	505496	Pin	1	52	112414	Piston Rod	1
5	500621	Pin	1	53	115556	Cylinder Assembly	1
6	108279	Pintail Tube	1	54	116173	Gland Assembly	1
7	110670	Stop	1	55	500786	O-ring	1
8	117824	Retaining Nut	1	56	501074	Quad Ring	1
9	505894	Wiper Seal	1	57	501090	Back-up Ring	1
10	505865	Polyseal	1	58	500784	O-ring	1
11	120330	Piston, Pull	1	59	505939	Retaining Ring	1
12	113251	Back-up Ring	2	60	123904	Spacer	1
13	500851	O-ring	1	61	506611	Polyseal	1
14	129944	Polyseal	1	62	123903	Gland	1
15	590517	HUCK & yr. of mfr. Sticker	1	63	502482	Screw	2
16	505887	O-ring	1	64	104293	Bleed Plug & O-Ring Assy	3
17	113253	Back-up Ring	1	65	-----	-----	---
18	120056	Rear Gland	1	66	127690	Throttle Arm	1
19	124209	Pintail Deflector	1	67	127029	Bushing & Screw Assembly	1
20	112491	End Cap	1	68	125656	Guard	1
21	120325	Rear Tube	1	69	500102	Screw	4
22	112502	Return Gland Assembly	1	70	120204	Plug	1
23	112427	Gland	1	71	111068	Plug	1
24	500776	O-ring	2	72	505446	O-ring	3
25	501082	Back-up Ring	6	73	120203	Pin	1
26	500778	O-ring	1	74	120129	Screw	1
27	501084	Back-up Ring	3	75	100874	Spring	1
28	112426	Gland	1	76	111067	Guide	1
29	501087	Back-up Ring	1	77	502929	Ball	1
30	500781	O-ring	1	78	111139	Seat	1
31	118865	Piston Assembly	1	79	112405	Reservoir Plunger	1
32	117773	Screw	1	80	501408	Quad Ring	1
33	503768	O-ring	1	81	112403	Housing/Spacer Assembly	1
34	117774	Piston	1	82	505864	Spring	2
35	500773	O-ring	1	83	114530	Plug	1
36	127888	Throttle Valve	1	84	505863	Spring	1
37	504408	O-ring	2	85	120127	Sleeve	1
38	115436	Air Hose Assembly	1	86	120128	Guide	1
39	504407	O-ring	1	87	502506	Ball	1
40	116272	Spring	1	88	114528	Seat	1
41	121241	Self-locking Nut	1	89	120353	Head Assembly	1
42	116585	Muffler End Cap	1	90	129710	Silicone Cover	1
43	115554	Muffler	1				
44	500777	O-ring	1	92	590351	Sticker	1
45	504127	Screw	3				
46	126941-2	Gasket	1				
47	505025	Retaining Ring	1	95	112501	Pull Gland Assembly	1
48	500873	O-ring	1	96	502053	Oval Point Set Screw	1

**When replacing Handle or Cylinder Assembly of any 245 series tool, or if Stickers become damaged, worn, missing, or unreadable, Stickers MUST be ordered and placed in the locations shown.**



## TROUBLESHOOTING

Always check out the simplest possible cause of a malfunction first. For example, an air hose not connected. Then proceed logically, eliminating each possible cause until the cause is located. Where possible, substitute known good parts for suspected bad parts. Use this section as an aid in locating and correcting malfunction.

### NOTE:

Piston Drift is when the air piston is in the down position, but the hydraulic pull piston is not in the full forward position. This causes an out of sequence condition.

- 1 *Tool fails to operate when trigger is depressed.*
  - a) Air line not connected
  - b) Throttle Valve O-rings (37 & 39), worn or damaged.
  - c) Throttle Valve Cable (2) is broken.
- 2 *Tool does not complete fastener installation and break pintail.*
  - a) Air pressure too low
  - b) Air Piston Quad-ring (50) worn or damaged.
  - c) Reservoir empty or low, refer to Fill and Bleed section.
  - d) Air in hydraulic system, refer to Fill and Bleed section.
  - e) Reservoir Springs (82) worn or damaged
  - f) Check for piston drift
- 3 *Pintail stripped and/or swaged collar not ejected.*
  - a) Check for broken or worn jaws in nose assembly, refer to nose assembly data sheet.
  - b) Check for loose Retaining Nut (8)
  - c) Check for piston drift.
- 4 *Tool has piston drift.*
  - a) Loose collet crashing into the front of the anvil, this causes the relief valve to open allowing the piston to drift. Tighten the collet and refer to Fill and Bleed section.
  - b) Worn or damaged Return Pressure Relief Valve in tool, inspect Seat (88), O-ring (72), Back-up Rings (25), Steel Ball (87) and Valve Spring (84). Replace if necessary.
  - c) Worn or damaged Piston Assembly (31); inspect O-ring (33), O-ring (35) and Back-up rings (27). Replace if necessary.
- 5 *Hydraulic fluid exhausts with air or leaks at base of handle.*
  - a) Worn or damaged Gland Assembly (54). Inspect Polyseal (61), O-rings (55 & 58), Quad-ring (56), and Back-up Ring (57). Replace if necessary.
6. *Hydraulic fluid leaks at rear of Pull Piston (11)*
  - a) Worn or damaged Rear Gland (18): Inspect O-rings (14 & 16) and Back-up Rings (15 & 17). Replace if necessary.
7. *Hydraulic fluid leaks at front of Pull Piston (11).*
  - a) Worn or damaged front seal, inspect Polyseal (10) replace if necessary.
8. *Pull Piston (11) will not return.*
  - a) Throttle Valve (36) stuck: Lubricate O-rings (37 & 39).
  - b) Throttle Arm (66), Cable (2) or Trigger (3) binding.
9. *Air leaks at air Cylinder Head (49).*
  - a) Worn or damaged O-ring (48): Replace if necessary.

## KITS AND ACCESSORIES

Stall Nut (Fig. 7)	-	120824
Assembly Bullet (Fig. 2)	-	120792
Polyseal Insertion Tool	-	505940
Service Kit	-	245KIT
Pintail Bag	-	125655





## **LIMITED WARRANTIES**

### **TOOLING WARRANTY:**

Huck warrants that tooling and other items (excluding fasteners, and hereinafter referred as "other items") manufactured by Huck shall be free from defects in workmanship and materials for a period of ninety (90) days from the date of original purchase.

### **WARRANTY ON "NON STANDARD OR CUSTOM MANUFACTURED PRODUCTS":**

With regard to non-standard products or custom manufactured products to customer's specifications, Huck warrants for a period of ninety (90) days from the date of purchase that such products shall meet Buyer's specifications, be free of defects in workmanship and materials. Such warranty shall not be effective with respect to non-standard or custom products manufactured using buyer-supplied molds, material, tooling and fixtures that are not in good condition or repair and suitable for their intended purpose.

**THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. HUCK MAKES NO OTHER WARRANTIES AND EXPRESSLY DISCLAIMS ANY OTHER WARRANTIES, INCLUDING IMPLIED WARRANTIES AS TO MERCHANTABILITY OR AS TO THE FITNESS OF THE TOOLING, OTHER ITEMS, NONSTANDARD OR CUSTOM MANUFACTURED PRODUCTS FOR ANY PARTICULAR PURPOSE AND HUCK SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECTLY OR INDIRECTLY, ARISING FROM THE USE OF SUCH TOOLING, OTHER ITEMS, NONSTANDARD OR CUSTOM MANUFACTURED PRODUCTS OR BREACH OF WARRANTY OR FOR ANY CLAIM FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

Huck's sole liability and Buyer's exclusive remedy for any breach of warranty shall be limited, at Huck's option, to replacement or repair, at FOB Huck's plant, of Huck manufactured tooling, other items, nonstandard or custom products found to be defective in specifications, workmanship and materials not otherwise the direct or indirect cause of Buyer supplied molds, material, tooling or fixtures. Buyer shall give Huck written notice of claims for defects within the ninety (90) day warranty period for tooling, other items, nonstandard or custom products described above and Huck shall inspect products for which such claim is made.

### **TOOLING, PART(S) AND OTHER ITEMS NOT MANUFACTURED BY HUCK:**

**HUCK MAKES NO WARRANTY WITH RESPECT**

**TO THE TOOLING, PART(S) OR OTHER ITEMS MANUFACTURED BY THIRD PARTIES. HUCK EXPRESSLY DISCLAIMS ANY WARRANTY EXPRESSED OR IMPLIED, AS TO THE CONDITION, DESIGN, OPERATION, MERCHANTABILITY OR FITNESS FOR USE OF ANY TOOL, PART(S), OR OTHER ITEMS THEREOF NOT MANUFACTURED BY HUCK. HUCK SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECTLY OR INDIRECTLY, ARISING FROM THE USE OF SUCH TOOLING, PART(S) OR OTHER ITEMS OR BREACH OF WARRANTY OR FOR ANY CLAIM FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

The only warranties made with respect to such tool, part(s) or other items thereof are those made by the manufacturer thereof and Huck agrees to cooperate with Buyer in enforcing such warranties when such action is necessary.

Huck shall not be liable for any loss or damage resulting from delays or nonfulfillment of orders owing to strikes, fires, accidents, transportation companies or for any reason or reasons beyond the control of the Huck or its suppliers.

### **HUCK INSTALLATION EQUIPMENT:**

Huck International, Inc. reserves the right to make changes in specifications and design and to discontinue models without notice.

Huck Installation Equipment should be serviced by trained service technicians only.

Always give the Serial Number of the equipment when corresponding or ordering service parts.

Complete repair facilities are maintained by Huck International, Inc. Please contact one of the offices listed below.

#### Eastern

One Corporate Drive Kingston, New York 12401-0250  
Telephone (845) 331-7300 FAX (845) 334-7333

#### Outside USA and Canada

Contact your nearest Huck International Office, see back cover.

In addition to the above repair facilities, there are Authorized Tool Service Centers (ATSC's) located throughout the United States. These service centers offer repair services, spare parts, Service Parts Kits, Service Tools Kits and Nose Assemblies. Please contact your Huck Representative or the nearest Huck office listed on the back cover for the ATSC in your area.



For the Long Haul™

## A Global Organization

Alcoa Fastening Systems (AFS) maintains company offices throughout the United States and Canada, with subsidiary offices in many other countries. Authorized AFS distributors are also located in many of the world's

Industrial and Aerospace centers, where they provide a ready source of AFS fasteners, installation tools, tool parts, and application assistance.

## Alcoa Fastening Systems world-wide locations:

### Americas

**Alcoa Fastening Systems**  
Aerospace Products  
Tucson Operations  
3724 East Columbia  
Tucson, AZ 85714  
800-234-4825  
520-747-9898  
FAX: 520-748-2142

**Alcoa Fastening Systems**  
Aerospace Products  
Carson Operations  
PO Box 5268  
900 Watson Center Rd.  
Carson, CA 90749  
800-421-1459  
310-830-8200  
FAX: 310-830-1436

**Alcoa Fastening Systems**  
Industrial Products  
Waco Operations  
PO Box 8117  
8001 Imperial Drive  
Waco, TX 76714-8117  
800-388-4825  
254-776-2000  
FAX: 254-751-5259

*For The Long Haul, The Future of Fastening Technology, The Future of Assembly Technology, The Future of Tooling Technology, and Tools of Productivity are service marks of Huck International. Huck provides technical assistance regarding the use and application of Huck fasteners and tooling.*

*NOTICE: The information contained in this publication is only for general guidance with regard to properties of the products shown*

**Alcoa Fastening Systems**  
Industrial Products  
Kingston Operations  
1 Corporate Drive  
Kingston, NY 12401  
800-278-4825  
845-331-7300  
FAX: 845-334-7333

**Alcoa Fastening Systems**  
Industrial Products  
Latin America Operations  
Avenida Parque Lira. 79-402  
Tacubaya Mexico, D.F.  
C.P. 11850  
FAX: 525-515-1776  
TELEX: 1173530 LUKSME

*and/or the means for selecting such products, and is not intended to create any warranty, express, implied, or statutory; all warranties are contained only in Huck's written quotations, acknowledgements, and/or purchase orders. It is recommended that the user secure specific, up-to-date data and information regarding each application and/or use of such products.*

**HWB898 1003-5M**

### Far East

**Alcoa Fastening Systems**  
Industrial Products  
Australia Operations  
14 Viewtech Place  
Rowville, Victoria  
Australia 3178  
03-764-5500  
Toll Free: 008-335-030  
FAX: 03-764-5510

### Europe

**Alcoa Fastening Systems**  
Industrial Products  
United Kingdom Operations  
Unit C, Stafford Park 7  
Telford, Shropshire  
England TF3 3BQ  
01952-290011  
FAX: 0952-290459

**Alcoa Fastening Systems**  
Aerospace Products  
France Operations  
Clos D'Asseville  
BP4  
95450 Us Par Vigny  
France  
33-1-30-27-9500  
FAX: 33-1-34-66-0600



# Alcoa Fastening Systems



One Great Connection<sup>SM</sup>